

Download and installation instructions for software release 1.7

Automatic update using IREX companion software

If you use the Microsoft Windows operating system, the Updater will download and store the firmware on your SD card automatically.

Please follow these steps:

1. Connect the device (switched on) to your PC and choose [Yes] on the "Now Charging..." message to export the SD card to your PC.
2. The Companion Software will start automatically, or can alternatively be started by opening "My Computer" and double-clicking the "iRexDR1000" disk.
3. The Companion Software will detect the new firmware and ask you to download it. Choose [Yes].
4. After successful download, close the Companion Software and choose "Safely Remove Hardware" on your computer.
5. On the device, the update procedure will start automatically; your device will reboot to install the new firmware and reboot again after successful completion.
6. You can verify the new firmware version in Settings > About.

Manual download and installation for all operating systems:

For users of Apple/Linux based PC's, you will have to manually download and extract the firmware update onto your SD card.

Please follow these steps:

1. Download software 1.7.1 from:
<http://support.irexreader.com/s.nl/sc.8/category.223/ctype.KB/KB.132/f>
2. Extract/copy the contents of this file to the root of your SD card (either while connected via USB, or by inserting the SD card into your PC's card reader). Make sure that the System folder in the ZIP is extracted to the root of the card, creating a folder called 'update' inside your current System folder on the SD card.
3. Put the SD card into your device or disconnect the USB cable.
4. The device will detect the new firmware and ask to install it. Choose [Yes].
5. The update procedure will start and automatically complete, your device will reboot with the new firmware.
6. You can verify the new firmware version in Settings > About.